

# S300TW SOFTPANEL USER MANUAL

Thanks for choosing the S300TW SOFTPANEL. This is the innovative LED application for professional lightings. This unit is used aluminum alloy structure, compact and fashion design, elegant, easy to install. With 6 Colors LED SOURCE. With the reasonable LED layout, it made the lighting more even, pure mixing color and large area color rendering. It can create the most brilliant lighting effect. Except DMX control, it still have the powerful RDM control technology. Also with the manual color temperature selection.



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT.
DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR
MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO
THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND
GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE
NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.



## **Technical Specifications:**

#### Optic

- 6 colors LED

- Beam angle: 110°

- Average lifetime: ≥50000 H

#### Color

 Color calibration system, color temperature adjustable (1800k-10000k)

- Can create unlimited movement feeling and infinite color changes

- CRI≥90

#### Effect

- 3 built-in program effect for option

- Fast electric strobe 1 ~ 25 Hz

Dimmer modes: 2Dimmer curves: 4Control and Program

- DMX Channel mode: 3 channel mode

- Protocal: DMX512, RDM

- Data connector:3PIN XLR DMX input/output

- Display: OLED display

#### Software

- Software updated: via USB signal to update

software, more convenient and faster- Silent fan, intelligence adjust speed

- Auto temperature control when overheating, make sure LED life time longer

#### Power consumption

- Voltage: AC 100V~240V 50/60Hz

- Max power consumption: 260W

#### Size and weight

- Size: 530\*140\*415mm


#### Other

- IP rating: IP 30


- Work environment: -5°C~45°C

- NW:16kg




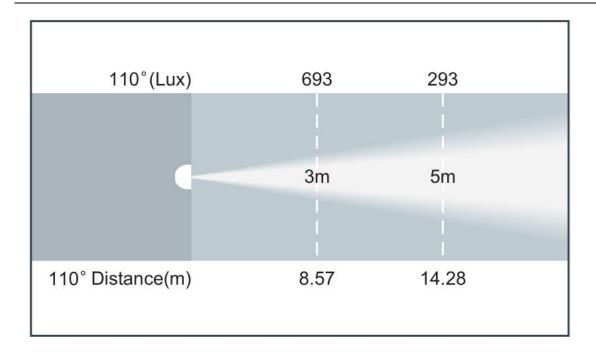

## DIMENSIONALDRAWINGS

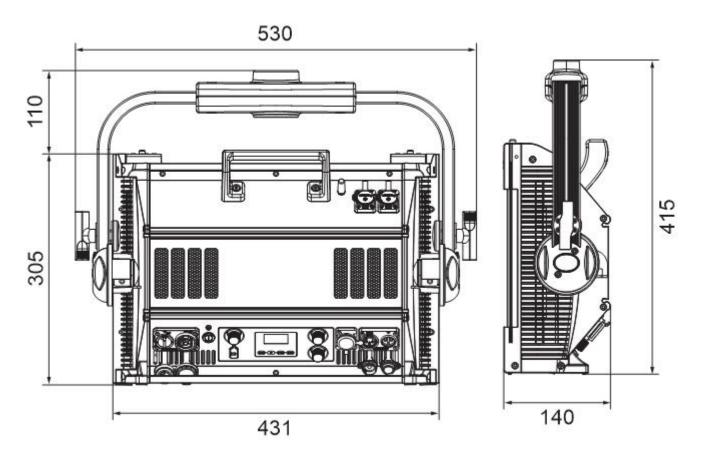



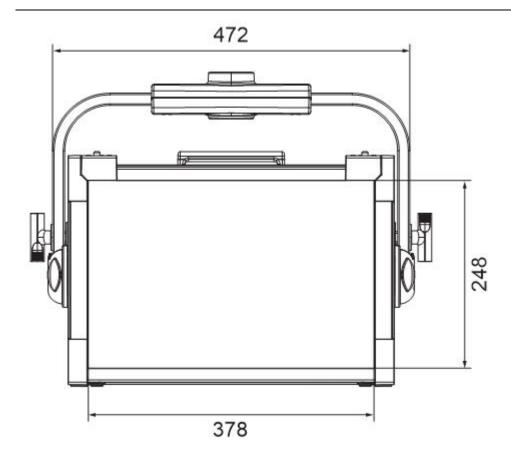

		RDM Template
Label:		S300 Soft Panel
Model:		S300 Soft Panel
Manufacturer:		CKC
Manufacturer ID:		0x062B
Device ID:		1213 xxxx(latter 4 digital is set manually)
DMX Start Address:		001
DMX Personality:	001:	03CH
	002:	06CH
	003:	13CH
Software Version		V1.01

# Sheet 1: Display menu

Default setting	the default setting which is highlighted in gray color.			
Boot display	Update Wait··· S300 Soft Panel			
	Ethernet…			



Interface show	ADDR:001					
MENU	Set ADDR	001-xxx				
Address	001	OUI AAA				
MENU						
Mode	3CH、6CH、130	CH				
	NO DMX	Hold/Black/ Progr				
		Display ON/OFF		30S screen saver setting		
			ON/0N1/OFF		Display menu button lock	
	LCD.Set	Key Lock			function	
					No dmx it will flash.	
		Flash	ON/OFF		Screen 180° flip	
		Inverse	OFF/ON		·	
	Temp. C/F	С			Temp. Unit:℃/°F	
		F				
		Standard				
		TV	Stage			
	Dim Mode	Architec				
		Theatre				
		Stage2				
	Disp.Set	Dimmer				
MENU		Strobe				
Function		Auto				
	Fan	High				
		Low				
	_	Standard				
	Power	Battery				
		LINEAR				
	Dim Curve	SQUARE				
		INV.SQ				
		S-CURV				
	Frequen	900HZ,1000HZ,1100HZ,1200HZ,1300HZ,1400HZ,1500				
		HZ,2500HZ,4000HZ,5000HZ,10kHZ,15kHZ,20kHZ,25k				
		HZ				
	Network	Universe		0-255		
		IP		000.000.000.000		
		Subnet		000.000.000.000		
		Protocol		ArtNet/KlingNet		



	Net	ON/OFF		
	Unlink	Yes/No		
	FLY-Switch	ON/OFF		
	USB	ON/OFF		
	MasterSW	ON/OFF		
	Defaults	Reset? / Cancel		
	Speed	01~99		
	Dimmer	000~255		
	-		STR 000-255	
		STATIC	Red/Green/Blue/White/Lemon/Cya	
		317416	n/RG/RB/	
_	Color	CHANG 15	STR 000-255	
Program		CHANG 30	STR 000-255	
		FADE	STR 000-255	
	Maaraa		31R 000-255	
	Macros	00~63		
	ССТ	2500K-10000K	4300K	
	HSI			
	Slave	Off/Slave		
		Current		Current fixture running
				time (H)
	TimeInfo	Total		Fixture total running
				time(H)
		Last		Clear last fixture running
Info				time(H)
		Password		Clear 0 (Password=050)
		Clear		ON/OFF
	TempInfo	LED Temp		
	Err. Info	None		
	ModelInf	Soft Panel		
	Software	V1.0.1		
Manual	Strobe Dimmer			
Calibrat	-Password- Red,Green,Blue,V	Calibration password=050		

# **DMX channel mode:**


HSI	8Bit	16Bit	Function	Values		
	1	1	Red	000-255	0%-100%	



2	2	Green	000-255	0%-100%	
3	3	Blue	000-255	0%-100%	
4	4	Warm White	000-255	0%-100%	
5	5	Lime	000-255	0%-100%	
6	6	Cyan	000-255	0%-100%	
			Shutter, Strobe:	STROBE	
			0-31	LED OFF	
			32-63	LED ON	
			64-95	Strobe slow to fast	
			96-127	LED ON	
7	7	Strobe	128-159	Pulse strobe slow to fast	
			160-191	LED ON	
			192-223	Random strobe slow to	
				fast	
			224-255	LED ON	
8	8	Dimmer	000-255	0-100%	
	9	Dim Fine	000-255	0-100%	
	10	ССТ	000	idle	
			001-255	CCT from 2500K-10000K	
	11	GReenPoint	0	Idle	
			1-127	Full Minus Green to	
				Neutral	
			128	Neutral White	
			129-255	Neutral to Full Plus	
				Green	
			0 - 20	Standard (default)	
			21 - 40	Stage	
			41 - 60	TV	
			61- 80	Archictural	Dim mode
	12	DimMode	81- 100	Theatre	
			101- 255	From Menu Default	
	13	Contral	0 -100	idle	
			Change Refresh Rate		
			101 - 105	900	
			106 - 110	1000	
			111 - 115	1100	
			116 - 120	1200 (default)	
			121 - 125	1300	
			126 - 130	1400	
			131 - 135	1500	
			136 - 140	2500	
			141 - 145	4000	
			146 - 150	5000	
			151 - 160	10000	



		161 - 165	15000	
		166 - 170	20000	Control
		171 - 175	25000	channel
		175-200	idle	
		Dimmer Curves		
			Dimmer Curve Linear	
		201-210	(default)	
		211-220	Dimmer Curve Square	
			Dimmer Curve Inverse	
		221-230	Square	
		231-240	Dimmer Curve S-Curve	
		241-255	idle	
1		Hue	0-100%	
2		Saturation	0-100%	
3		Intensity	0-100%	

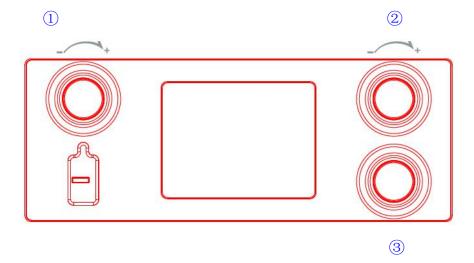

### The potentiometer function adjustment explanation:

- 1: When Program is set to CCT mode, knob 1 is for brightness adjustment, knob 2 is for color temperature adjustment, knob 3 is for GreenPoint adjustment.
- 2. When Program is set to HSI mode, knob 1 is for brightness adjustment, knob 2 is for color adjustment, knob 3 is for saturation adjustment.
- 3. (1). When Program is set to STATIC function on the Color mode, knob 1 is for brightness adjustment, knob 2 is for static adjustment, knob 3 is for strobe adjustment.
- (2) When Program is set to CHANG15/30/FADE function on the Color mode, knob 1 is for brightness adjustment, knob 2 is for speed adjustment, knob 3 is for strobe adjustment.
- 4. When Program is set to Macro mode, knob 1 is for brightness adjustment, knob 2 is for macros adjustment, knob 3 is for strobe adjustment.